

You may be losing valuable water to leaks. Your new auto-read water meter makes it easy to determine if there is a leak in your home or business in a few steps:

1. Remove the black lid on the solar cell so that light reaches the cell.



2. Check the leak icon.



LEAK INDICATOR

Displays a possible leak:

OFF

No leak indicated.

FLASHING

Intermittent leak indicates that water has been used for at least 50 of the 96 15-minute intervals during a 24-hour period.

ON CONTINUOUSLY

Indicates water use for all 96 15-minute intervals during a 24-hour period.

If there is a leak, [click here for information on fiixing leaks around your home](#) .

[For additional information on your new auto-read water meter, click here.](#)

[For information on your meter's accuracy – click here](#)